

REPLACING STEM AND BONNET ASSEMBLY IN EXPOSED FAUCETS

Refer to the [Parts Breakdown Book](#) for replacement part numbers or [contact customer support](#) for help in finding a part

You may need several of these tools:

- Allen wrench (5/16 or 7/32)
- Channel locks
- » Crescent wrench
- » Flathead screwdriver
- » Phillips head screwdriver
- Pipe joint compound
- Soft cloth
- Teflon tape
- No tools necessary

1. Always turn off water supply. Turn hot and cold water full on to relieve line pressure.
2. Using a flathead screwdriver or knife, lift off index button, remove handle screw using a phillips head screwdriver, remove handle.
3. With the flathead screwdriver lift up and remove bonnet lock ring and bonnet lock.
4. Unscrew stem and bonnet with an 8" or 10" crescent wrench.
5. Install new stem and bonnet.

TIP: Open the cartridge slightly to make installation easier.

6. Replace handle.
7. Turn on water, check for leaks.

Part key:

No.	Description
1	Index button
2	Handle screw
3	Handle
4	Bonnet lock ring
5	Bonnet Lock (not on all models)
6	Stem and bonnet assembly

