



## AERATOR REPLACEMENT

Refer to the [Parts Breakdown Book](#) for replacement part numbers or [contact customer support](#) for help in finding a part

### You may need several of these tools:

- Allen wrench (5/16 or 7/32)
- Channel locks
- » Crescent wrench
- Flathead screwdriver
- Phillips head screwdriver
- Pipe joint compound
- » Soft cloth
- Teflon tape
- No tools necessary

1. Remove old aerator turning counterclockwise.
2. Install new aerator turning clockwise.
3. Turn on water, check for leaks.

If necessary, wrap aerator with soft cloth to protect the finish and tighten with channel locks. **DO NOT OVERTIGHTEN**